

# Strobe controller FL-01CX



Compact reliable strobe controller can remotely control the flash rate of 1 to 4 strobes. Flash rate can be set from 1 to 10 flashes per second.



## CAUTION!


Risk of electric shock  
Read instructions before installing  
or connecting to power



### Warning:

- Never operate unit when case is open,
- Never operate unit in the rain or in damp moist conditions as this could cause electric shock.
- Follow standard electrical safety precautions when installing, operating or servicing the unit to prevent electrical shock, fire, or equipment damage.
- These units are for commercial use and contain no user serviceable parts inside.
- Servicing must be conducted by qualified service personnel.

## FL-01CX strobe controller

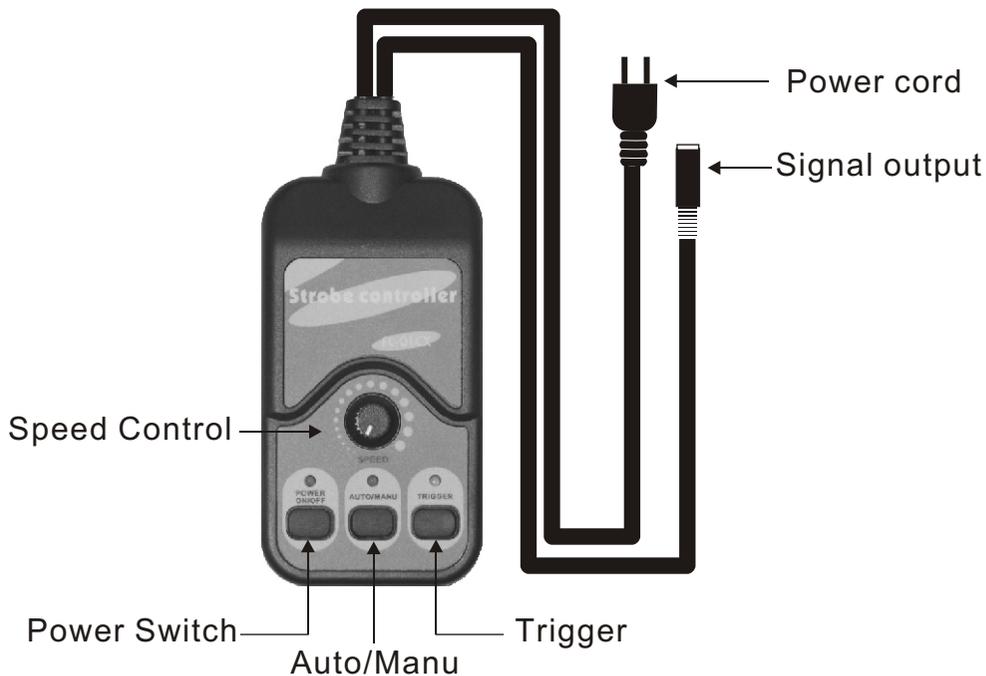

## Operating instructions

This unit is the unsophisticated type of strobe controller. You could use the automatic and manual mode to control the flash of the strobe.

1. Unpack unit From carton and inspect for damage.  
if unit is damaged please contact your Geni dealer immediately!
2. Connect controller to strobe (the FL-075 or FL-1800.....)  
with a signal cable made of two standard 1 /4" mono jacks with proper cable.  
See below for signal specifications.
3. Plug power cord into properly grounded socket.  
-Check that the voltage marked on the back of unit is correct for your area.
4. While the button of POWER ON/OFF is ON , the upper red LED is lit which indicates the power of controller starts for operating.
5. While the button of AUTO/MANU is ON , the upper red LED is lit which indicates the timer of automatic flash starts; the interval of time could be adjusted by RATE knob, and the interval of time could be from 0.1second to 2 seconds. When it triggered the flash once, the green LED also flashes once.
6. While the button of TRIGGER is ON , which indicated to start the control of manual flash, press the button once then the trigger flash once, and the green LED also flashes once when the unit triggered. When AUTO/MANU is ON, the button of trigger also could be work.
7. The order of trigger flash: Manual Trigger Automatic intermittent trigger

## Installation

Unit can be mounted in any position.

## Signal specification

Trigger is a positive 10-12VDC pulse high for minimum 30ms. Tip or 1 /4" jack is positive signal, base negative

## Maintenance

No user serviceable parts, refer servicing to a qualified service technician.

## Specifications

Number of strobe: 8 unit maximum  
Output signal: 10~12VDC  
Voltage: Refer detail the back of unit  
Fuse: Internal (0.5A/250V)  
Dimensions: 120x65x35mm (LxWxH)  
Weight: 353g.