

# Disco Strobe(FL-045B)

## Introduction

Congratulations on purchasing a GENI strobe light. This state-of-the-art 45-watt variable speed strobe light includes the latest features. Prior to use, we suggest that you carefully read all the instructions.

## Features

Speed control

Synchronous operation of multiple units with the FL-01C controller (sold separately).

## Caution

Never use this unit in a wet and/or dusty room

Replace bulb and fuse with same type.

## Controls and Components

1. Fuse
2. Power Cord
3. Speed Control (1-12 flashes per second).
4. Signal jacks

To run units synchronously, connect FL-01C controller to the strobe light using a 1/4" mono cable, and use the second signal jack to connect to additional units using 1/4" mono cables.

## Bulb Installation/Replacement

1. Before opening unit covers, make sure that the unit is cool and not connected to power source.
2. Remove the front lens by loosening the nuts located on either side of the lens.
3. Install/replace bulb (ST-045). DO NOT TOUCH GLASS WITH BARE HANDS. If you do touch the glass with bare hands, clean it with alcohol using a cotton ball or soft cloth.
4. Replace the front lens.

## Specifications

Control Voltage. .... 230V

Strobe Lamp..... ST-045

Fuse..... 1A

Dimensions..... 8.66x6.88x8.66 inch (220x175x220 mm)

Weight..... 5,28 lbs (2.4 kg)